

FindARTs

User Manual

High Fidelity ART Display

 | 17"

使用前請先下載FindARTs APP

Before using,
Please download FindARTs APP



目錄

安全指示	5
宣告和聲明	6
盒裝內容	7
包裝內容物	7
移動主機	8
拆開主機包裝	8
搬移主機	10
放置主機	10
放下主機	10
安裝主機	11
主機安裝規格	11
壁掛安裝說明	12
安裝主機支架	13
使用橡膠墊	14
設定主機	15
主要元件	15
連接電源變壓器	16
開啟/關閉主機電源	17
控制器使用說明	18
控制器按鈕說明	18
使用情境/方式說明	18
金鑰使用說明	21
附錄 A：規格	23

SAFETY INSTRUCTIONS	24
Declarations and Statements	25
WHAT'S IN THE BOX	26
Package Contents.....	26
MOVING THE SYSTEM	27
Unpacking the System	27
Carrying the System	29
Placing the System.....	29
Setting Down the System	29
MOUNTING THE SYSTEM	30
System Mount Specifications.....	30
Wall Mount Instructions	31
INSTALLING THE STANDS	32
USING THE RUBBER PADS	33
SETTING UP THE SYSTEM	34
Main Components.....	34
Connecting the Power Adapter	35
Powering On/Off the System	36
THE FINDARTS REMOTE CONTROL	37
Remote Control Overview	37
Using the Remote Control.....	37
USING THE CONTENT ENCRYPTION KEY	40
APPENDIX A: SPECIFICATIONS	42

安全指示

使用主機之前，請詳閱下列安全指示，並留存以供日後參考。

- 使用主機之前，請先詳閱本手冊並遵照指示，以保護您自己及他人之財產，並避免造成嚴重傷害。
- 請務必確保當地的供電符合主機的電源要求。
- 請勿擋住主機背面的通風孔，也務必讓主機四周保持足夠的空間來散熱。建議您定期清潔主機的通風孔。
- 請勿打開背蓋。保固範圍不涵蓋因使用不當所造成的損壞。
- 請勿將本主機置於陽光直射處或安裝於任何熱源附近（例如散熱器、電熱器、暖爐或音訊放大器）。如果主機受到陽光直射，長時間下來會造成損壞，反光也會影響使用者觀看主機內容的體驗。
- 5GHz 產品僅供室內使用。
- 請勿將主機置於不穩定、傾斜或是會搖晃的平台或推車上。主機可能會掉落，導致嚴重的人身傷害或主機損壞。
- 請務必遵循主機標籤上標示的所有警告和指示。
- 請勿將主機安裝於密閉的環境中。
- 如果想要將主機安裝於嵌入式電視牆壁掛安裝架中，請務必在主機的四周留出足夠的空間，以確保良好的通風和避免運作溫度異常。
- 應避免過度壓力或溫度變化，因為主機中特殊液晶材料可能會造成裂痕、刮痕或損壞。
- 讓蠟燭或其他易燃物品遠離主機，以避免發生火災。
- 請勿將您手指或其他物體置於主機與其底座或鄰近區域之間以免受傷或損壞主機。
- 請勿對主機過度施力，以避免損壞本產品。
- 請僅使用製造商指定之配件。
- 請勿擅自修復或拆開主機。開啟和移除外蓋，可能會造成高壓電擊或其他危險。未遵照本警告可能導致死亡或重傷。請洽經銷商或維修技師尋求協助。
- 主機擺放位置應確保電源插頭和插座便於連結，並可保護電源線避免遭到踩踏或夾住。
- 請勿使用任何未經認可的物品或纜線連接至本主機。
- 本手冊所述產品可能包含友達和可能授權人受著作權保護的軟體。未經許可，客戶不得複製或篡改上述軟體。
- 請僅使用隨附擦拭布擦拭，且清潔前須關閉電源。
- 請務必將本主機及所有包裝內容物（包括 EPE 泡棉包裝緩衝材料和保護板）置於孩童無法取得之處。



警告：如果使用 Class I 的電源供應器，只能連接到有接地保護的電源插座。

如已遵照本手冊指示操作，主機仍無法正常運作，請諮詢授權的維修技術人員。

注意！
 使用過度恐傷害視力。
 使用 30 分鐘請休息 10 分鐘。
 未滿 2 歲幼兒不看螢幕，
 2 歲以上每天看螢幕不要超過 1 小時。

宣告和聲明

限用物質含有情況標示聲明書

設備名稱：液晶主機			型號 (型式)：SN17XAA01.0			
元件	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ⁺⁶)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
電路板	-	○	○	○	○	○
外蓋	○	○	○	○	○	○
液晶面板	○	○	○	○	○	○
電源供應器	-	○	○	○	○	○
<p>備註 1：「超過 0.1 wt%」和「超過 0.01 wt%」係指限用物質之百分比含量超出百分比含量基準值。</p> <p>備註 2：「○」係指該項限用物質之百分比含量未超出百分比含量基準值。</p> <p>備註 3：「-」係指該項限用物質為排除項目。</p>						
<p>友達光電股份有限公司 (AUO) 地址：30078 新竹科學園區新竹市力行二路 1 號</p>						

 
本產品可在海拔 2000 公尺以下安全使用。

備註 4：以上資訊不含畫框

盒裝內容

包裝內容物

請確認產品包裝箱含有下列物品。如果有任何遺漏的配件，請聯絡您向其購買主機的當地經銷商。本手冊內的圖示可能與實際產品和內容物不同。

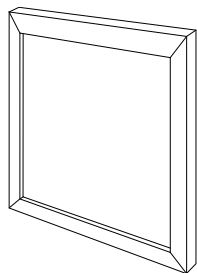


主機

畫框樣式依客戶選擇而有所不同



 控制器

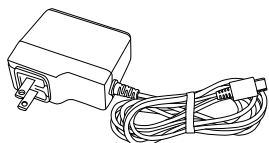


電源變壓器




Micro USB轉Type-A USB轉接頭2個

 部分產品已協助安裝於主機上

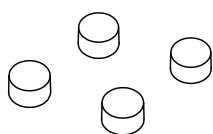


橡膠墊

 如欲瞭解如何使用橡膠墊，請參閱「使用橡膠墊」一節。

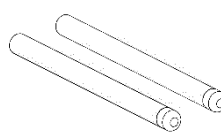


主機支架

 

延伸管

 如欲瞭解如何使用支架可參閱「安裝主機支架」一節延伸管非標準配件內附與否依畫框款式有所不同。

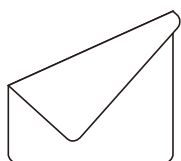

清潔布



 
產品說明書

移動主機


拆開主機包裝

拆開主機包裝之前，請先在牆壁插座附近挪出一處平整且穩固的平面。根據產品包裝箱外面的指示，妥善放置產品包裝箱。


1. 從側邊開啟產品包裝箱。

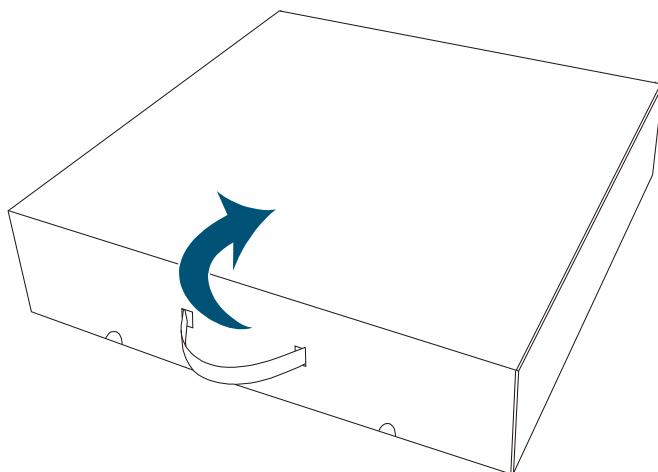

 2. 從包裝箱中取出主機與隔層紙板。

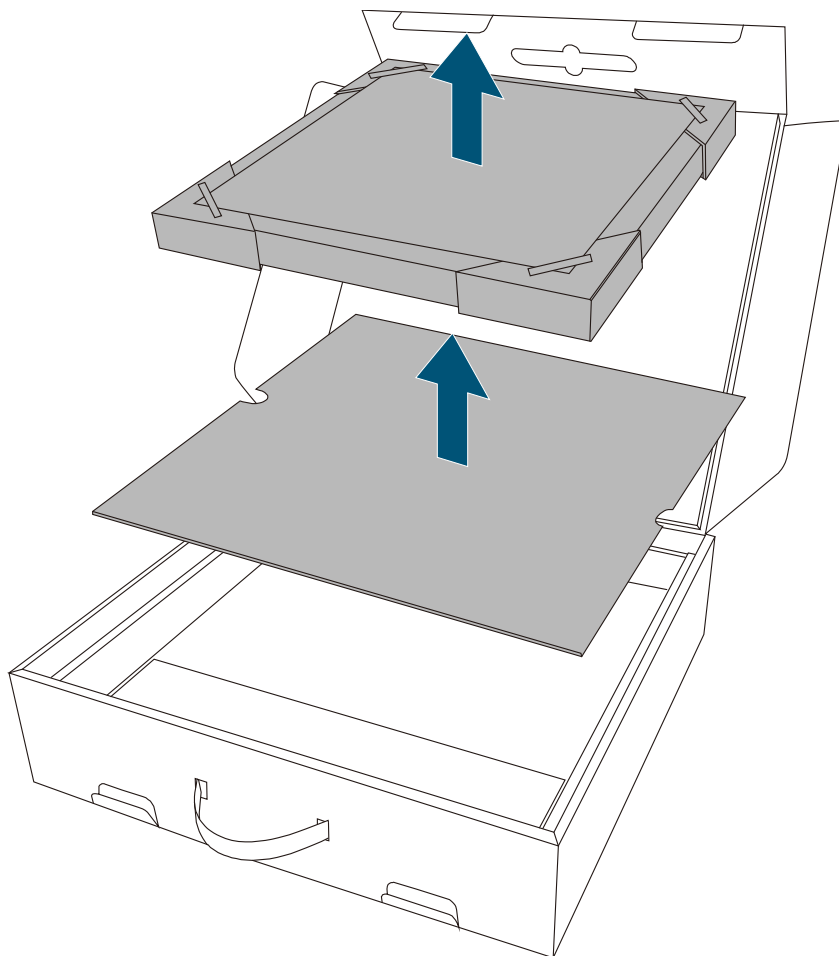

 3. 從配件盒中取出配件。

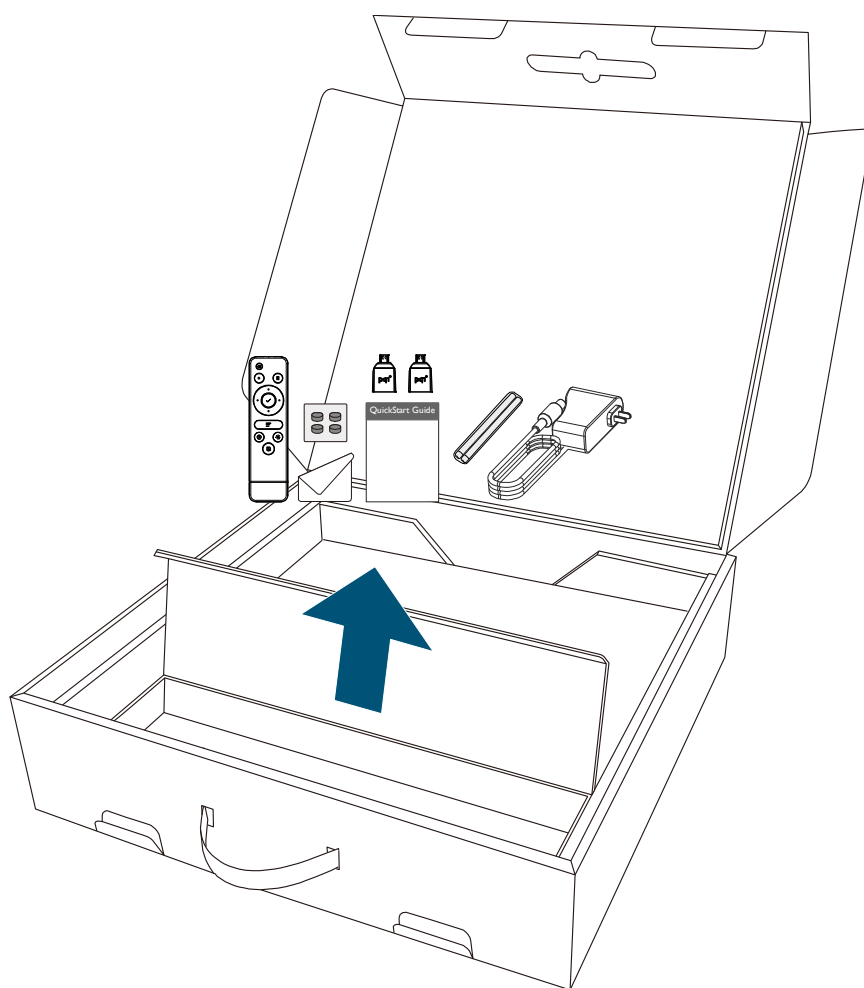


4. 取下黏貼於框腳套的保護膜，並移除框角套。



註：若要將主機放在平坦表面上，請勿取下顯示面的保護膜。

搬移主機

 
搬移主機時務必用雙手，並將顯示面板朝前方。握持主機時，請勿對顯示面施力。

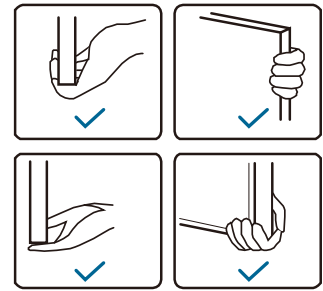

注意：請務必避免對顯示面施力或使用尖銳物體。


放置主機

 放置主機時，請務必將顯示面朝下，如「放下」一節的圖所示。若未安裝主機支架，切勿將主機直立放置，也不要將主機向左或向右傾斜，或是以邊框的一角來保持平衡。

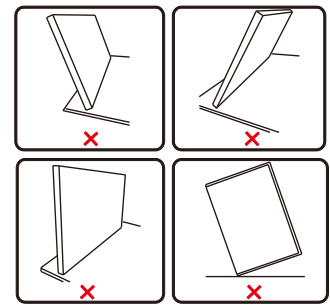

放下主機

 首次放下主機時，請勿取下顯示面的保護膜。先在平整而穩固的表面上蓋上保護板和桌墊，然後將顯示面面朝下放置在此平面上，如圖所示。

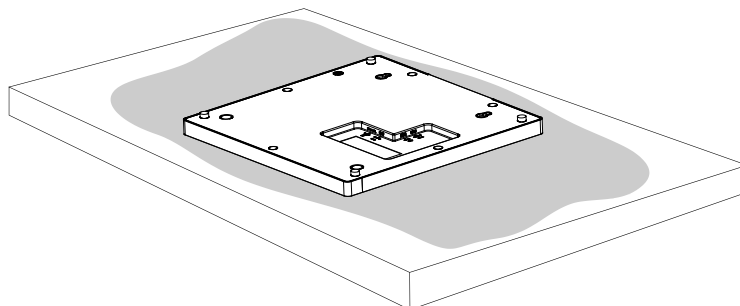

注意：切勿按壓背蓋，或在其上放置任何物品，否則可能會損壞主機的內部零件。

安裝主機

 
為避免受傷，請遵循安裝指示，安全地將主機安裝至牆壁上。



注意：主機如果掉落，可能會使周遭的人受傷。

主機安裝規格


主機背面配備兩個安裝孔，可將主機安裝到牆上。請使用兩個M6 x 15mm螺絲或掛勾，將主機牢牢地固定到牆上（最大頭部直徑：11mm，最小頭部直徑：6mm，最大頭部深度：6.5mm）。

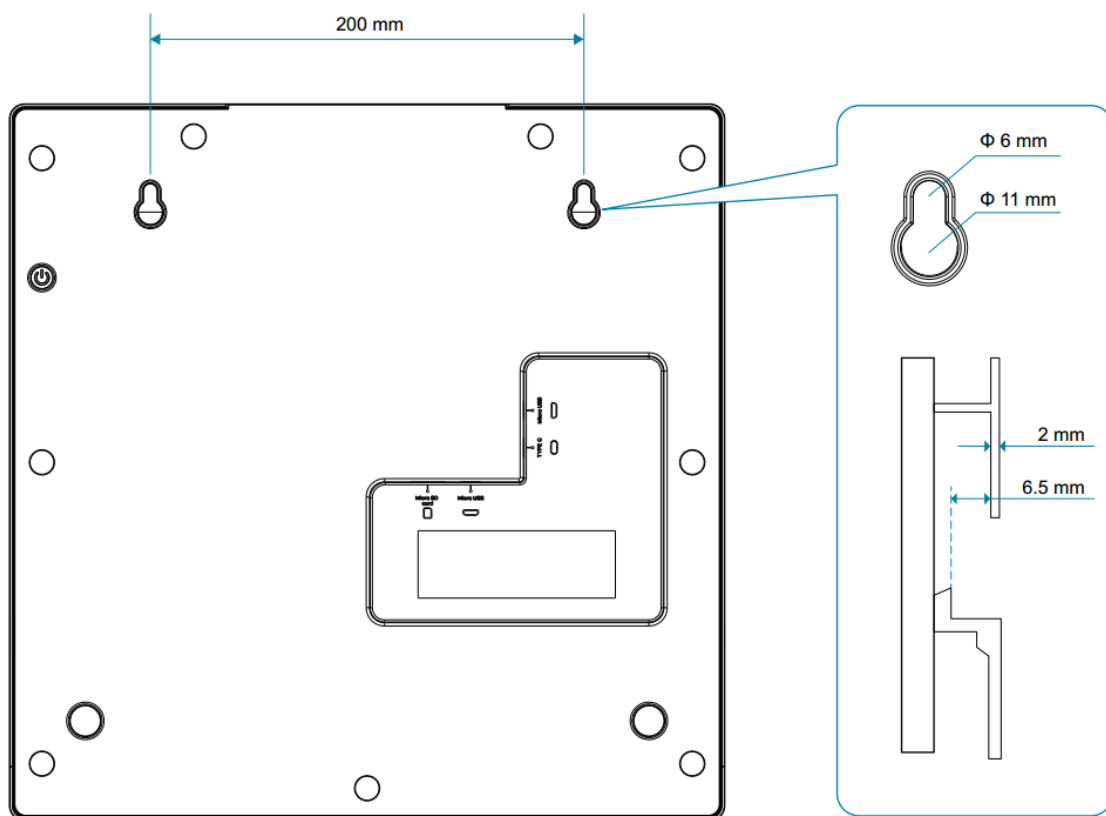

壁掛安裝說明


請按照下列步驟將螺絲安裝到牆上，以便主機牢固到位。

 1. 根據上一節所述距離，將兩個螺絲安裝到牆上。

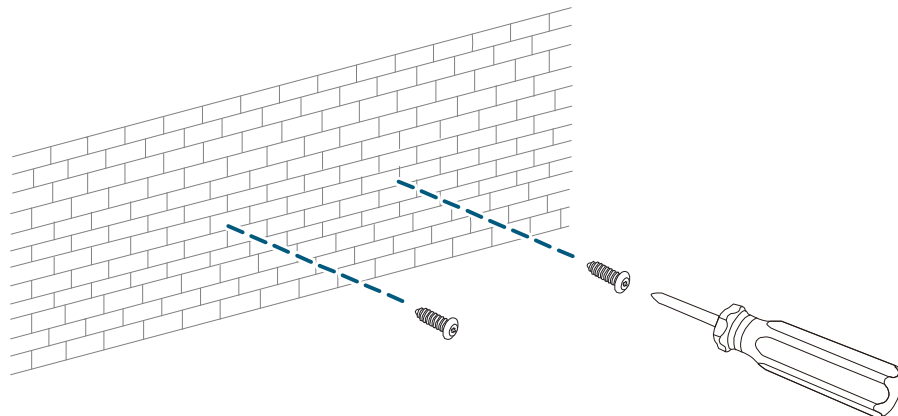

註：您可以使用水平儀來確保兩個螺絲平直安裝。

 
2. 將主機安裝到牆上，確保安裝好的螺絲與主機背面的安裝孔接合。

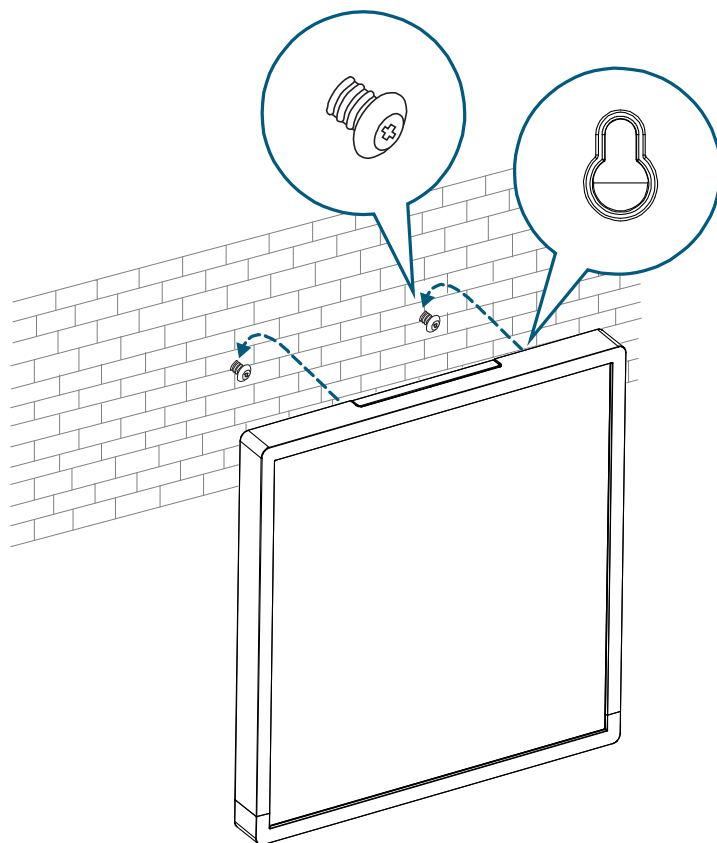


安裝主機支架

主機隨附兩個支架，可讓您在桌面上直立放置主機。
請按照下列步驟安裝主機支架。

 1. 從主機後方面板上指示的位置移除橡膠塞。

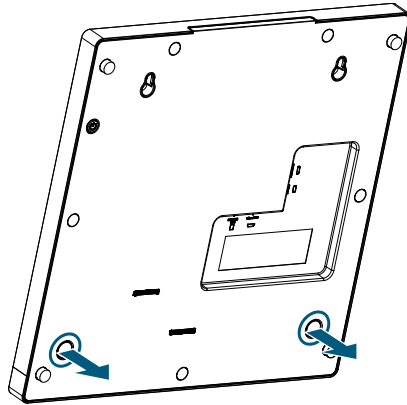


 2. 插入支架，並順時針旋緊。

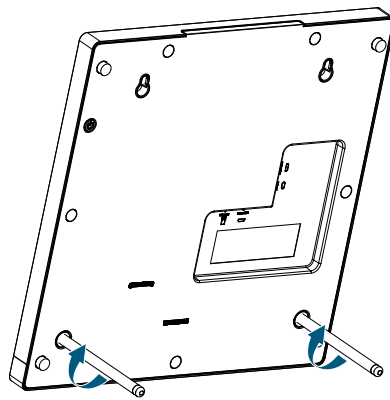

註：部分產品因畫框較寬，為提供較觀賞角度請依下述步驟安裝延伸管。

 
1. 將延伸管插入支架並旋緊，使其成為長支架。

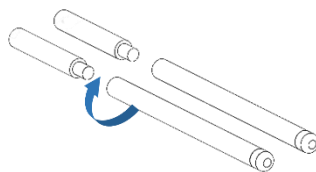


2. 將長支架插入主機，並順時針旋緊。

使用橡膠墊

 將主機安裝到牆上時，您可能需要將隨附的四個橡膠墊黏到主機背面，以便主機和牆壁之間有足夠空間用於連接纜線和配線。




若要使用橡膠墊，請移除背面的紙，然後將其黏至主機背面，位置如下所示。

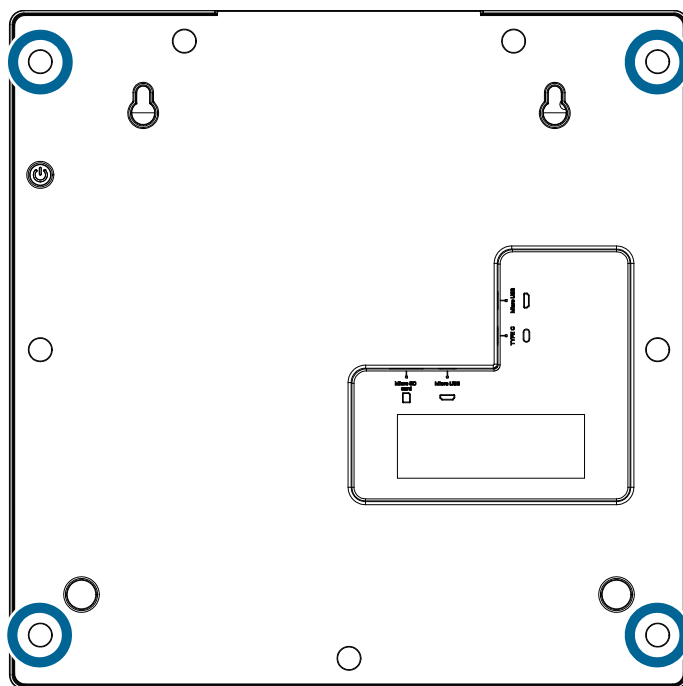 


設定主機

主要元件

 下列圖片和表格顯示接頭和其他元件位置。

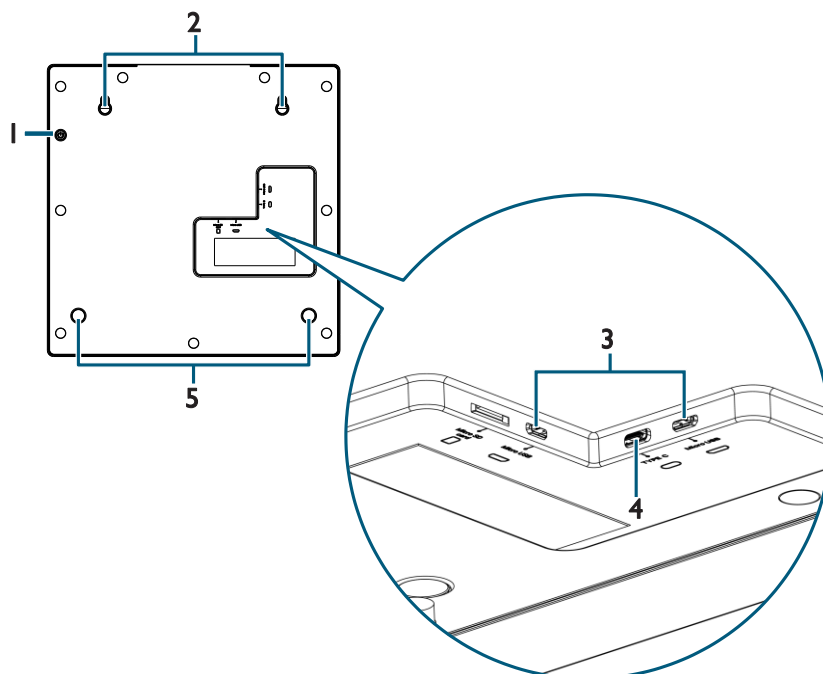


項目	說明
1 電源按鈕	開啟/關閉主機。主機開啟時： <ul style="list-style-type: none">● 按下電源開關，以關閉主機背光。● 按住電源開關 3 秒鐘，以關閉主機。
2 安裝孔	讓您將主機安裝到牆上。
3 Micro USB 連接埠	可使用 Micro USB 轉 Type-A USB 轉接頭與 FindARTs 金鑰 Type-A 端進行連接，會於插上金鑰時立即進行畫冊匯入動作。
 註： <ul style="list-style-type: none">● 部分產品的 2 處 Micro USB 連接埠已安裝上 Micro USB 轉 Type-A USB 轉接頭。● 呈上，控制器的接收器將預先安裝於 Type-C USB 旁的 Micro USB 連接埠上。	
4 Type-C USB 連接埠	可連接隨附的 Type-C USB 電源變壓器。
5 支架插槽	供安裝主機支架。

連接電源變壓器

1. 將電源變壓器連接至主機上的 Type-C USB 連接埠。
2. 將電源線插頭完全插入電源插座。主機會自動開啟電源。



 註：只要將電源線插頭插入電源插座，主機就會自動開啟電源。安裝完成後，若要關閉主機，不建議從電源插座拔下電源線插頭。請使用主機背面的電源開關。詳細資訊請參閱第 17 頁的「開啟/關閉主機電源」。

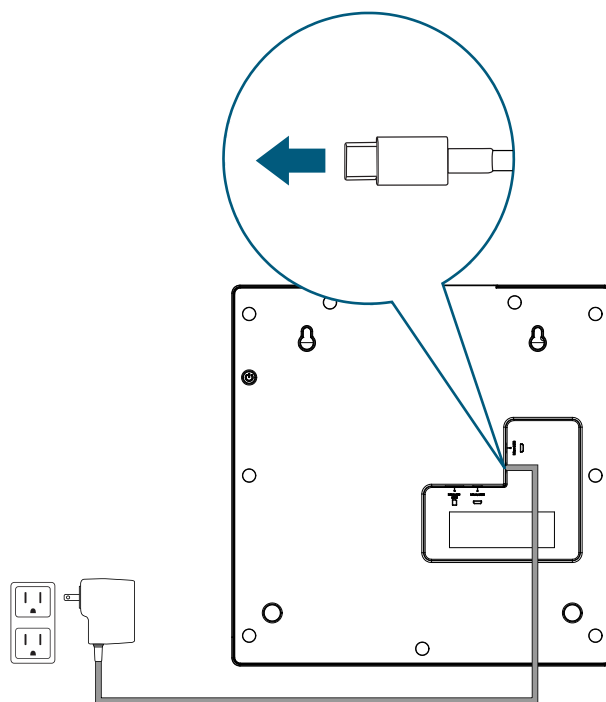

注意：連接鬆脫可能產生雜訊。請勿在短時間內重複插拔電源線。



 
註：隨附的電源變壓器視您購買本主機的国家而有所不同。在任何情況下，電源變壓器皆應符合電源插座的AC電壓規格且經過您所在國家核准並符合安全標準。



注意：中斷電源變壓器的連接時，請務必先將插頭從電源插座上拔起。

開啟/關閉主機電源


若要開啟主機電源，請按下主機側邊的電源開關 1 秒鐘即可開啟主機。
主機開啟時，按住電源開關 3 秒鐘即可關閉主機電源。

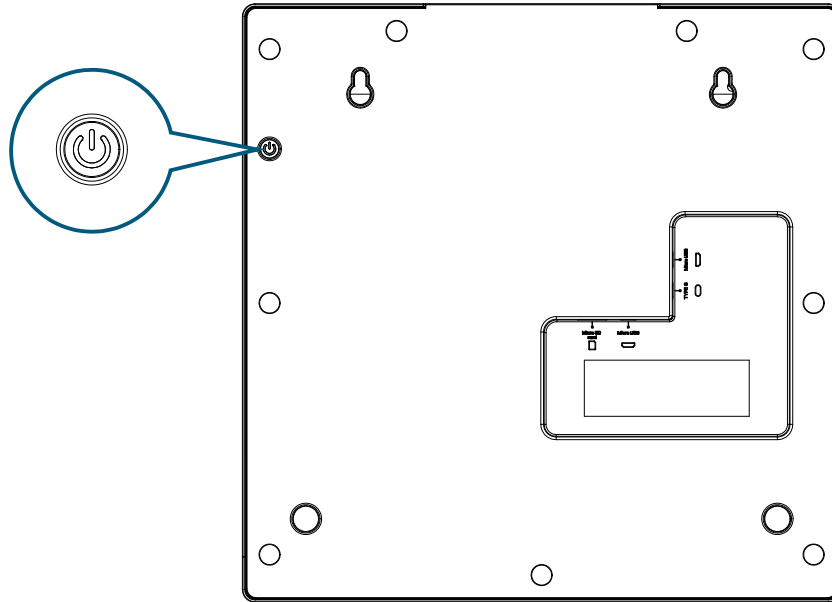

註：主機開啟時，按下電源開關 1 秒鐘即可關閉背光，不會關閉主機電源；主機背光關閉時，按下電源開關 1 秒鐘即可開啟背光。
本主機支援上電開機。

控制器使用說明

 控制器按鈕說明

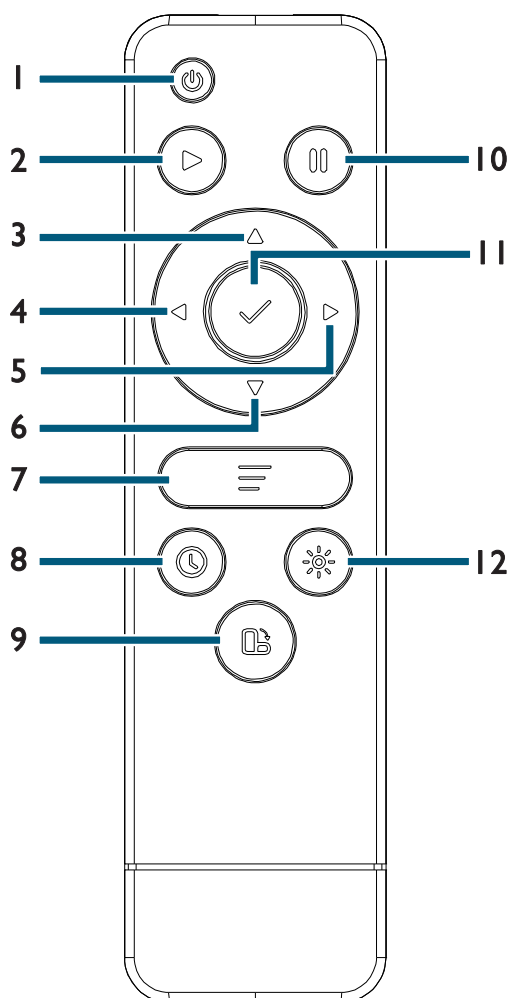

編號	按鈕
1	電源開關
2	播放
3	向上選擇
4	前一張圖
5	後一張圖
6	向下選擇
7	切換畫冊
8	播放間隔時間調整
9	展示方向旋轉
10	暫停
11	確認
12	亮度調整

使用情境/方式說明

連接手持控制器



註： 以下步驟已於本產品出廠時安裝完成

接收器需安裝 2 顆 4 號 (AAA) 電池方可使用 (本產品未附電池)

控制器可遙控最遠距離為 10 公尺 (無牆面阻擋)

1. 於控制器背面電池槽中取出 USB 接收器
2. 將接收器安裝於 USB 轉接頭，並將轉接頭插上 FindARTs 硬體背面的 USB 插槽中 (PQI 字樣朝上)

開啟/關閉顯示器電源

按下「1. 電源開關」開啟或關閉電源

 
播放與暫停

暫停或繼續播放畫冊內作品

- 按下「10. 暫停」，暫停目前播放內容，並停留在當下畫面



- 按下「2. 播放」，繼續播放當下內容，並恢復畫冊內作品輪播

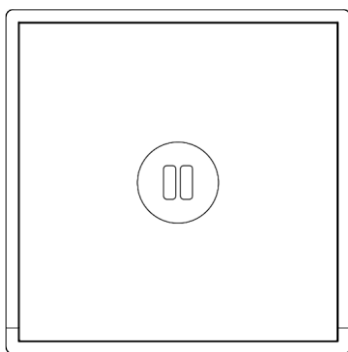

作品切換

 
切換畫冊內作品

- 按下「4. 前一張圖」，切換至前一項播放內容
- 按下「5. 後一張圖」，切換至後一項播放內容

畫冊切換

在裝置存有多個畫冊時，可隨心切換畫冊供賞析


1. 按下「7. 切換畫冊」，出現目前儲存的畫冊
2. 按下「3. 向上選擇」與「6. 向下選擇」選擇畫冊
3. 按下「11. 確認」開始播放所選取之畫冊

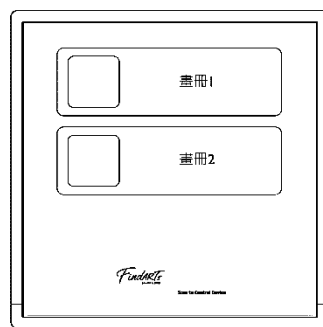

播放間隔時間調整

調整畫冊內作品播放間隔，以表現出不同情境氛圍

 
1. 按下「8. 播放間隔時間調整」，出現時間調整選擇畫面
2. 按下「3. 向上選擇」與「6. 向下選擇」進行時間調整
3. 按下「11. 確認」完成設定

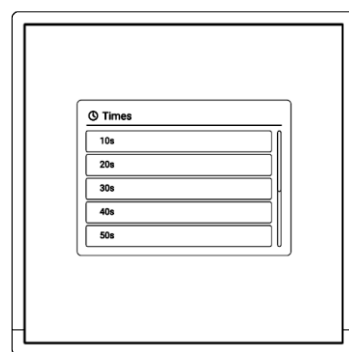


顯示亮度調整

調整作品亮度以表現出不同情境氛圍

 
1. 按下「12. 亮度調整」，出現亮度調整選擇畫面
2. 按下「3. 向上選擇」與「6. 向下選擇」調整亮度
3. 按下「11. 確認」完成設定

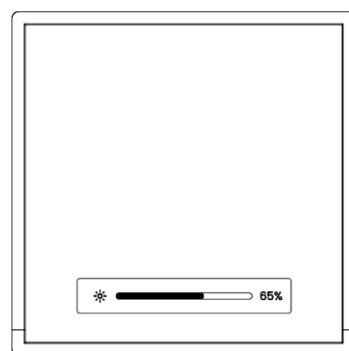


金鑰使用說明

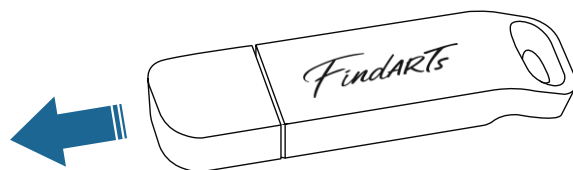 

 1. 取出授權金鑰，並移除保護蓋。
2. 將金鑰安裝於 USB 轉接頭，並將轉接頭插上 FindARTs 硬體背面的 USB 插槽中 (PQI 字樣朝上)。
3. 金鑰插入後，畫面顯示 Storage inserted 字樣，表示已偵測到金鑰並已綁定裝置。

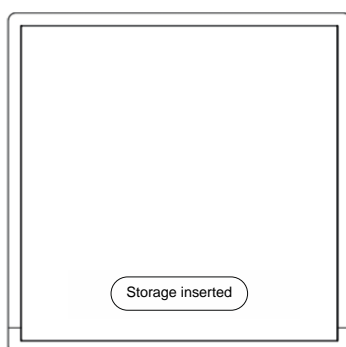

 
4. 裝置將自動開始匯入畫冊，並顯示匯入進度，不須進行任何操作。

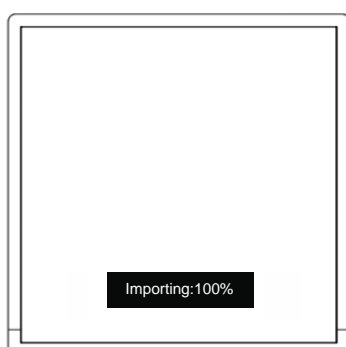

5. 匯入完成後顯示 **Finish import** 完成字樣，隨後將自動播放授權畫冊畫面，此時已完成畫冊匯入，並可移除金鑰。



 6. 金鑰移除後畫面將顯示 **Storage removed** 字樣，5秒後提醒字樣會自動消失。

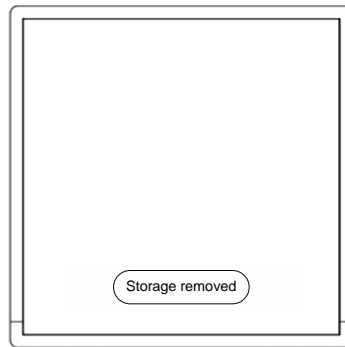

註：

- 每把金鑰僅能配對單一台 FindARTs 裝置，如插入非對應 FindARTs 裝置則不允許匯入授權畫冊。
 - 非使用 FindARTs 裝置將無法讀取授權畫冊。
 - 金鑰完成授權畫冊匯入後即可移除，無需插著裝置。
 - 裝置不可插入非官方授權之金鑰，否則可能造成裝置損壞。
-

附錄 A：規格

		機型	FindARTs 17"
項目			
主機			
LCD 尺寸 (吋)			17
解析度			1920 × 1920
亮度 (cd/m ²)			350
對比率			1000:1
上/下/左/右可視角度 (度)			89/89/89/89
耗電量 (瓦)			26W(typ.) / 36W(max.)
色深			16.7M (8bit)
尺寸長 x 寬 x 深 (mm)*1			330 x 330 x 19.9
重量 (kg)*1			Unpacked 2.1
電源			
額定電壓電流			DC 12V / 3A
電源變壓器長度 (公尺)			1.8
系統			
CPU			四核心 ARM [®] Cortex™- A53
作業系統			Android 9.0
RAM			2GB DDR
儲存容量			8GB eMMC
連線能力			
I/O 連接埠			Type C DC-In x1, Micro USB x2
網路	Wi-Fi		2.4GHz 和 5GHz
	藍牙		BT4.2
環境			
作業溫度			0°C - 40°C
儲存溫度			-10°C - 60°C
作業濕度			20% - 80% RH
存放濕度			20% - 80% RH

*不含畫框



註：為了提升本產品觀看作品的真實感，產品進行適度遮蔽作品邊界。

SAFETY INSTRUCTIONS

Please carefully read through and keep the following instructions for future reference before using the system.

- Before using the system, please read this manual completely and follow the guidelines to protect your own and other people's property and avoid causing serious injury.
- Make sure that the local power supply complies with the system's power requirements.
- Do not block the ventilation openings on the rear of system and ensure that there is enough space around the system to allow for heat dissipation. It is suggested to periodically clean the system's ventilation openings.
- Do not open the rear cover. Damage caused by improper use is not covered by warranty.
- DO NOT place this system in direct sunlight or install near any heat sources (such as radiators, heat registers, stoves, or sound amplifiers). Exposure to direct sunlight can cause damage over time and sunlight reflection will spoil user experience when viewing content on the system.
- 5GHz product for indoor use only.
- Do not place the system on platforms or carts that are unstable, slanted or shaky. The system may fall and cause serious personal injury or damage to the system.
- Always comply with all warnings and instructions labels on the system.
- Do not install the system in a confined environment.
- If you want to mount the system in a recessed TV wall mount, make sure to leave enough space around the system to ensure good ventilation and to avoid operation at an abnormal temperature.
- Avoid excessive pressure or temperature changes as special liquid-crystal material in the system may result in cracks, scratches or damage.
- Keep candles or other flammable items away from the system to avoid risks of fire.
- Do not stick your finger or other objects in-between the system and its stand base or its neighboring area in order to avoid harming yourself or damaging the system.
- Do not apply excessive force on the system so as to avoid damaging the product.
- ONLY USE accessories specified by the manufacturer.
- Never attempt to repair or open the system by yourself. Opening and removing the covers may expose you to dangerous voltage or other hazards. Failure to follow this WARNING may result in death or serious injury. Please contact your dealer or a service technician for assistance.
- When positioning the system, make sure the power plug and outlet are easily accessible and protect the power cord from being walked on or pinched.
- DO NOT use any unapproved items or cables to connect to this system.
- Product described in this manual may include copyrighted software of AUO and possible licensors. Customers shall not reproduce or tamper with the said software without permission.
- Clean only with a dry cloth provided by the manufacturer and turn the power off before cleaning.
- Keep this system and all package contents (including the EPE foam packaging cushion and protective board) out of the reach of children at all times.



WARNING: If using a Class I adapter, connect only to a grounded electrical outlet.

Consult an authorized service technician if the system does not operate normally when you have followed the instructions in this manual.

この装置は、クラスB機器です。この装置は、住宅環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI – B

Declarations and Statements

DECLARATION OF THE PRESENCE CONDITION OF THE RESTRICTED SUBSTANCES MARKING

Equipment Name: LCD Display		Type Designation (Type): SNI7XAA01.0				
Unit	Restricted substances and its chemical symbols					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr ⁺⁶)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Circuit board	—	○	○	○	○	○
Cover	○	○	○	○	○	○
LCD Panel	○	○	○	○	○	○
Power adapter	—	○	○	○	○	○

Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

Note 2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

Note 3 : The “—” indicates that the restricted substance corresponds to the exemption.

AU Optronics Corporation (AUO)
 Address : No. 1, Li-Hsin Rd. 2, Hsinchu Science Park, Hsinchu 30078, Taiwan, R.O.C.

This product is safe for use at an altitude of 2000m and below.

The information above does not apply to the system’s frame.

Safety Instruction

 
- The battery of remote controller should be replaced by Carbon zinc type or Alkaline type.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

To reduce the risk of fire or burns, the batteries do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

WHAT'S IN THE BOX

Package Contents

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your system. The illustrations in this manual may differ from the actual product and items.

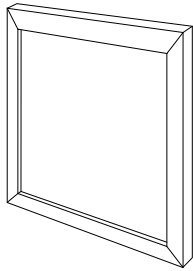


System with Frame Attached


The actual design of the frame will differ based on the model purchased.



 Remote Control

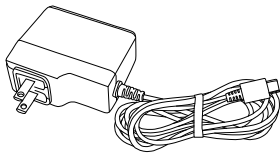


Power Adapter

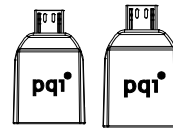 


**Type-A USB-to-Micro
USB Adapter x2**

 For some systems the adapters will be pre-installed onto the system.




Rubber Pads

 To learn how to use the rubber pads, refer to the "USING THE RUBBER PADS" section.



Stands / Extension Tube

 To learn how to use the stands, refer to the "SETTING UP THE SYSTEM" section. Extension tubes are not a standard accessory. Whether or not it is included depends on the style of the frame.

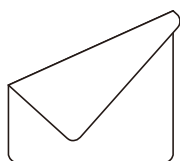

Cleaning Cloth



 
User Manual

MOVING THE SYSTEM


Unpacking the System

Before unpacking the system, prepare a flat and stable surface near a wall outlet. Set the product box in a position according to the indications on the outside of the product box.


1. Open the product box from the side of the box.

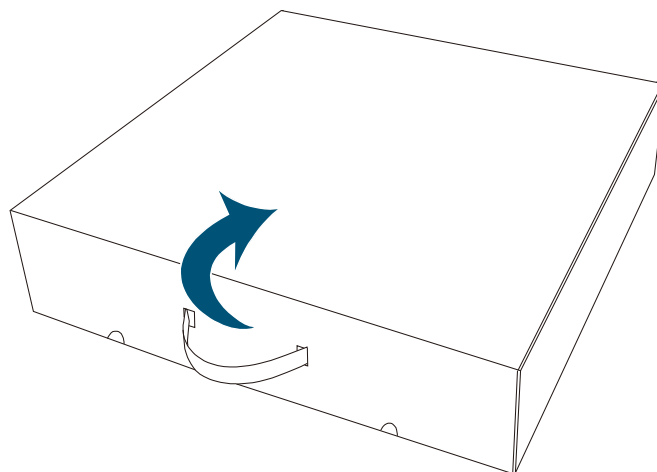

 2. Remove the system and then the cardboard backing from the box.

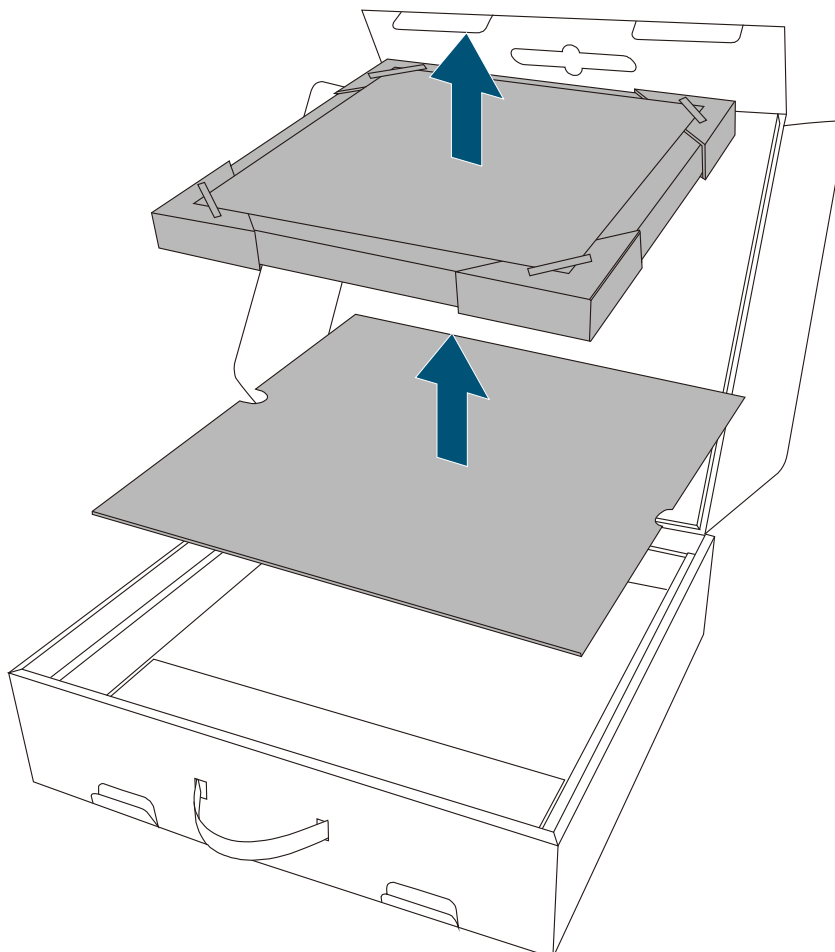

 3. Open the accessory box and then remove the accessories

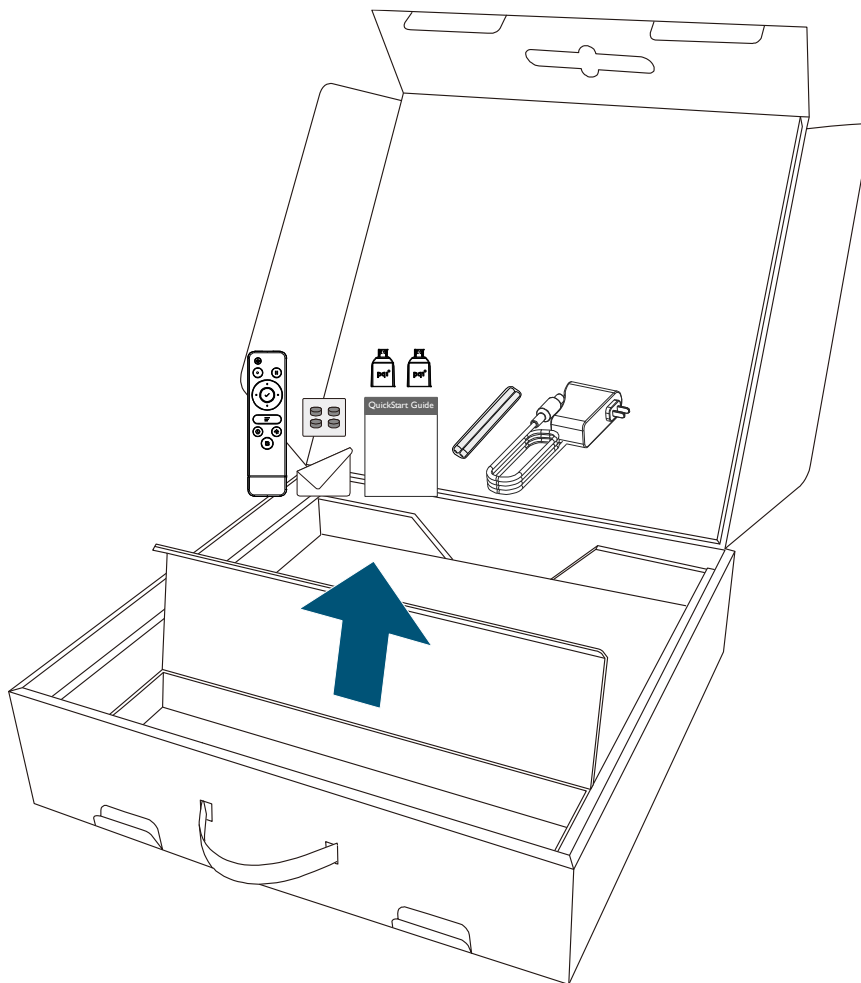


4. Remove the protective film and triangle-shaped cardboard corners from the system.



NOTE: If you are going to set the system down on a flat surface, **DO NOT** remove the protective film.

Carrying the System

 
When carrying the system, always carry it using both hands and with the system panel facing forward. **DO NOT** put force to the screen when gripping the system.

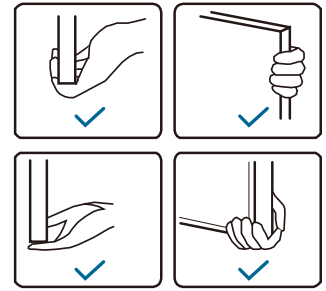

CAUTION: Avoid applying force or using sharp objects on the screen at all times.


Placing the System

 When placing the system, always put the screen face down as illustrated in the Setting Down the System section. If the stands for the system are not installed, never stand the system upright or tilt the system towards the left, right or balanced on a single corner of the frame.

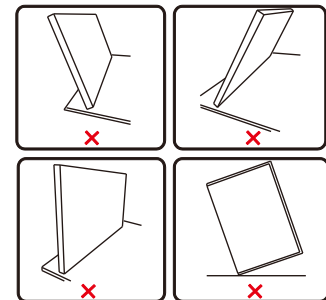

Setting Down the System

 DO NOT remove the protective film from the screen when setting the system down for the first time. Place the screen face down on a flat and stable surface covered by a protective sheet and a table cushion as shown in the illustration provided.

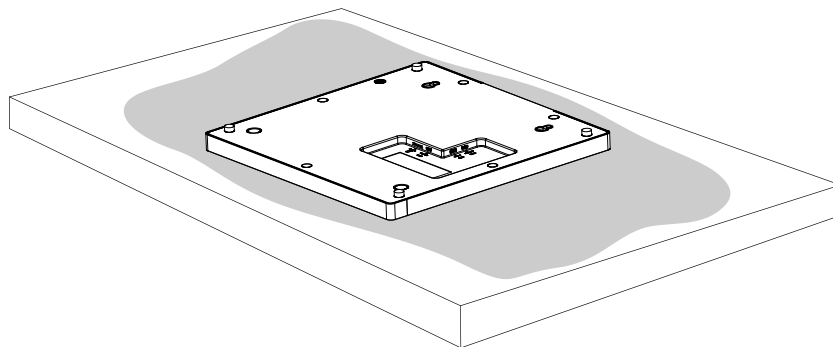

CAUTION: Never press or place anything on the back cover. This may damage the internal parts of the system.

MOUNTING THE SYSTEM

 
To avoid injuries, follow the installation instructions to safely install the system onto a wall.



CAUTION: Dropping the system may cause injuries to people around it.

System Mount Specifications


The system is equipped with two mount holes on the back side that allow for mounting the system on a wall. Firmly secure the system onto a wall using two M6 x 15mm screws or hooks (maximum head diameter: 11 mm, minimum head diameter: 6mm, maximum head depth: 6.5mm).

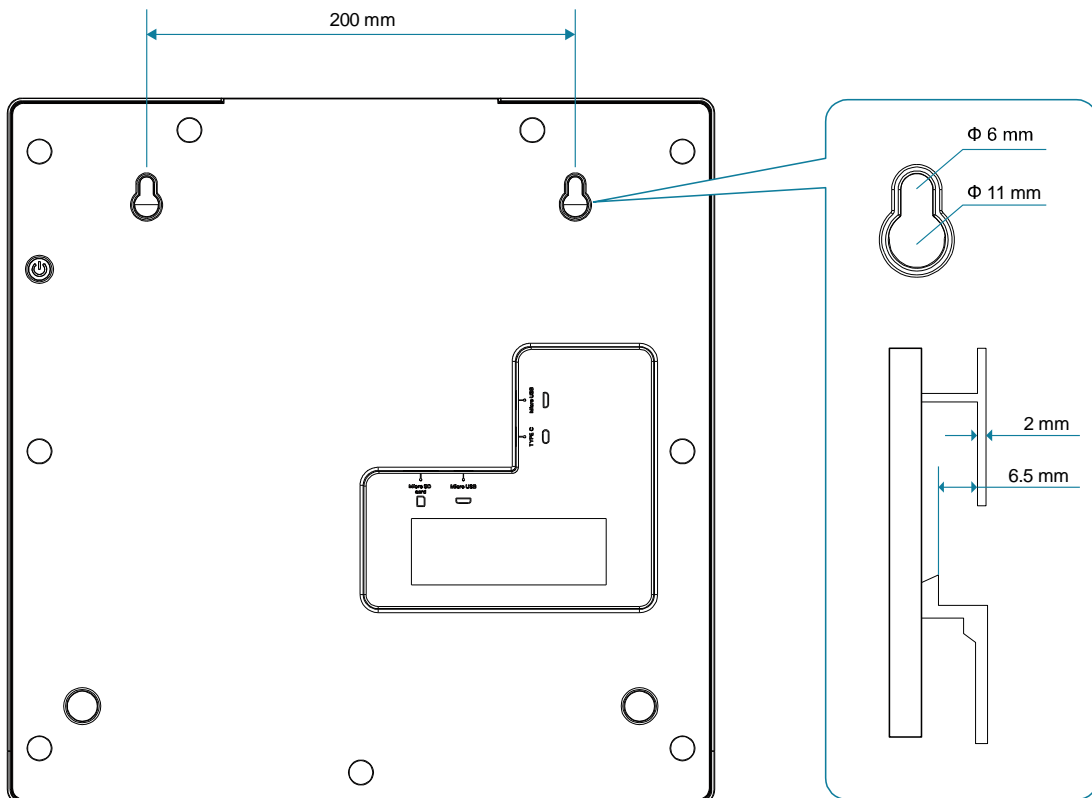

Wall Mount Instructions


Follow the steps below to install the screws into the wall so that the system can be firmly secured in place.

 1. Install the two screws into the wall based on the dimensions described in the previous section.

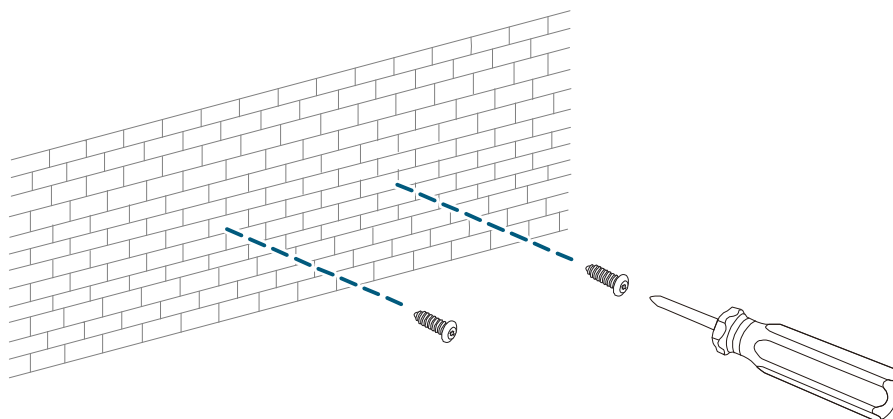

NOTE: You can use a spirit level to ensure that the two screws are installed perfectly straight.

 2. Mount the system onto the wall ensuring that the installed screws fit into the mount holes on the back side of the system.

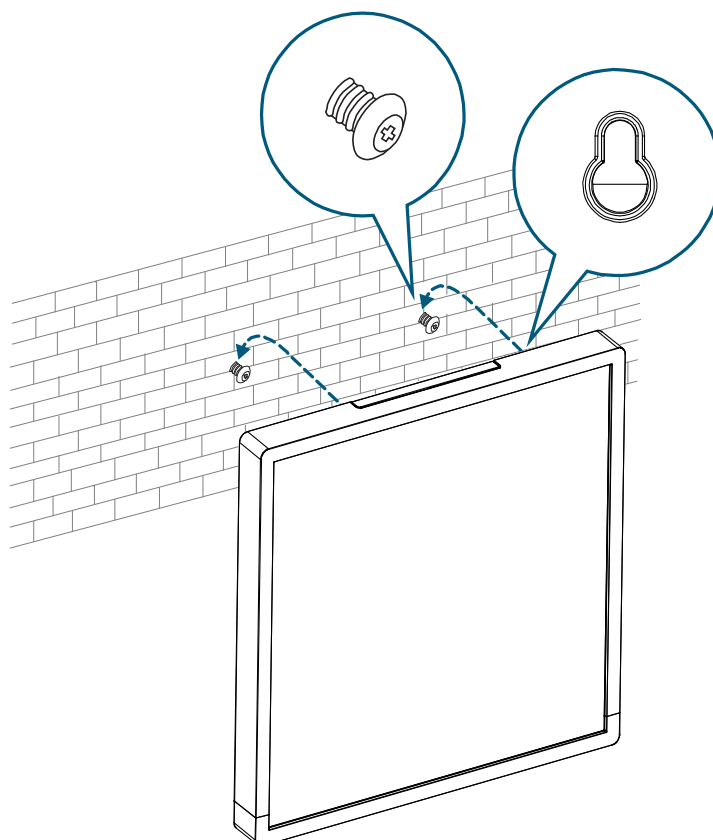


INSTALLING THE STANDS


The two stands provided with the system allow you to position your system upright on a desktop.

Follow the steps below to install the stands on the system.

 1. Remove the rubber stoppers from the indicated locations on the rear panel of the system.

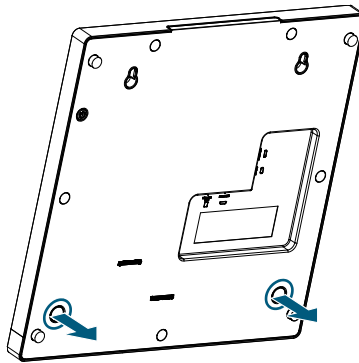


 2. Insert and tighten the stands by turning the stands clockwise.

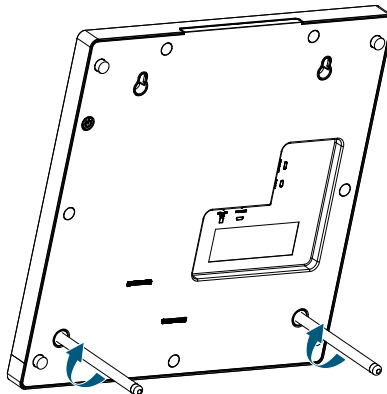

NOTE: For some products with wide frames, to provide a better viewing angle, please follow the steps below to install the extension tube.

 
1. Insert the extension tube into the stand and screw it tightly so that it becomes a long stand.

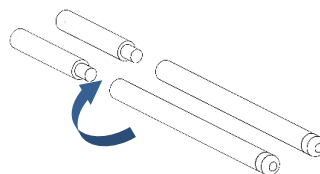


2. Insert and tighten the long stands by turning the stands clockwise.

USING THE RUBBER PADS

 When mounting the system on the face of a wall, you may need to adhere the four provided rubber pads on the back side of the system so that there is space between the system and the wall for cable connection and cable routing.



 
To use the rubber pads, remove the paper backing the pad and adhere it on the locations at the back side of the system indicated below.

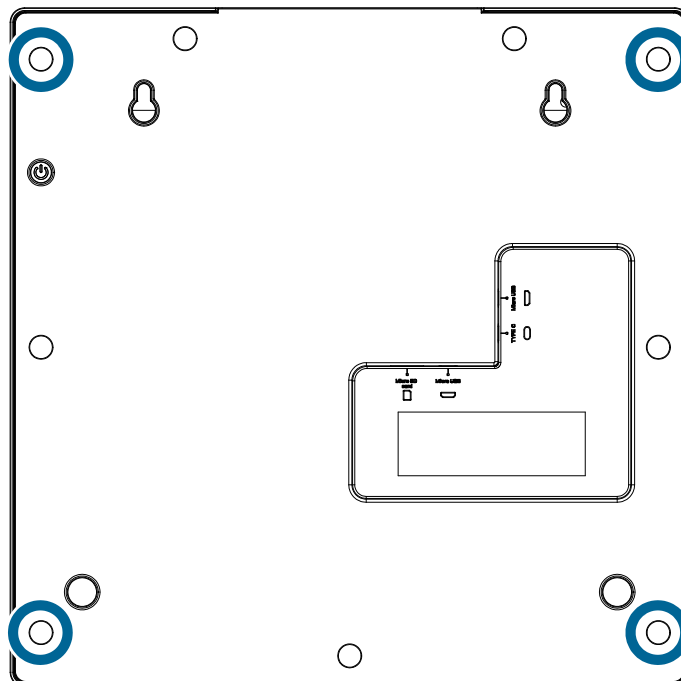

SETTING UP THE SYSTEM

Main Components

The following image and table show the location of the connectors and other components.

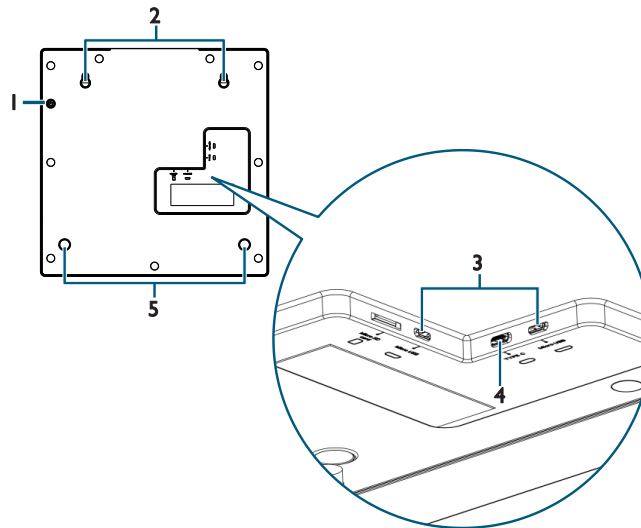 


Item	Description
1 Power Button	Turns on/off the system. When the system is turned on: <ul style="list-style-type: none">• Press the power button to turn off the system backlight.• Press and hold the power button for 3 seconds to turn off the system.
2 Mount Holes	Allows you to mount the system on a wall.
3 Micro USB Port	Allows you to connect a FindARTs content encryption key via the Type-A USB-to-Micro USB adapter. The albums within the dongle will be automatically loaded to the system once it is inserted.
NOTE: <ul style="list-style-type: none">• For some systems the Micro USB port next to the Type-C USB port will be pre-installed with the dongle for the remote control.• For some systems the Micro USB port next to the microSD card reader will be pre-installed with a Type-A USB-to-Micro USB adapter.	
4 Type-C USB Port	Connects to the supplied Type-C USB power adapter.
5 Stands Slots	Allows you to install the stands for the system.

Connecting the Power Adapter

1. Connect the supplied power adapter to the Type-C USB port on the system.
2. Fully insert the power cord plug into the power outlet socket. The system will power on automatically.



 NOTE: The system will power on automatically anytime the power cord is plugged into the power outlet socket. It is not recommended to remove the power cord plug from the power outlet socket in order to shut the system down after finishing the installation. Use the power button on the back of the system. See “Powering On/Off the System” on page 17 for detailed information.

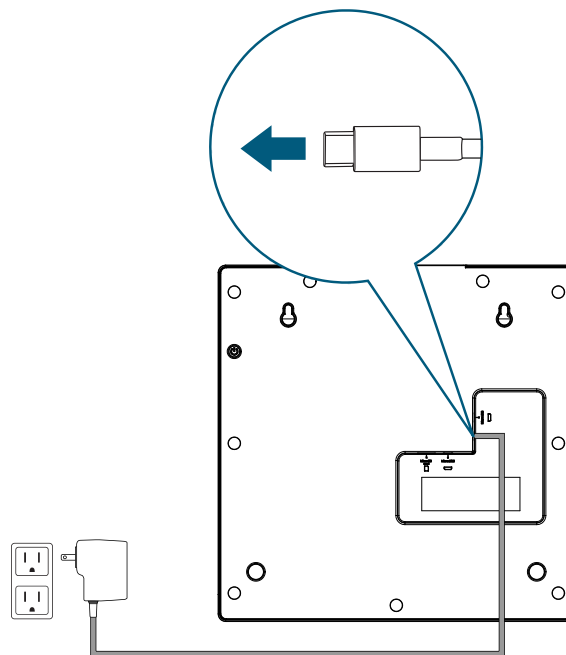

CAUTION: Loose connections may cause noise. Do not plug and unplug the power cord repeatedly in a short period of time.



NOTE: The supplied power adapter varies depending on the country where you purchased this system. For all cases, use a power adapter that matches the AC voltage of the power outlet and has been approved by and complies with the safety standard of your country.

 


CAUTION: When disconnecting the power adapter, be sure to first disconnect the plug from the outlet socket.

Powering On/Off the System

To power on the system, press the power button on the rear side of the system for one second to turn on the system.

When the system is turned on, press and hold the power button for three seconds to power off the system.

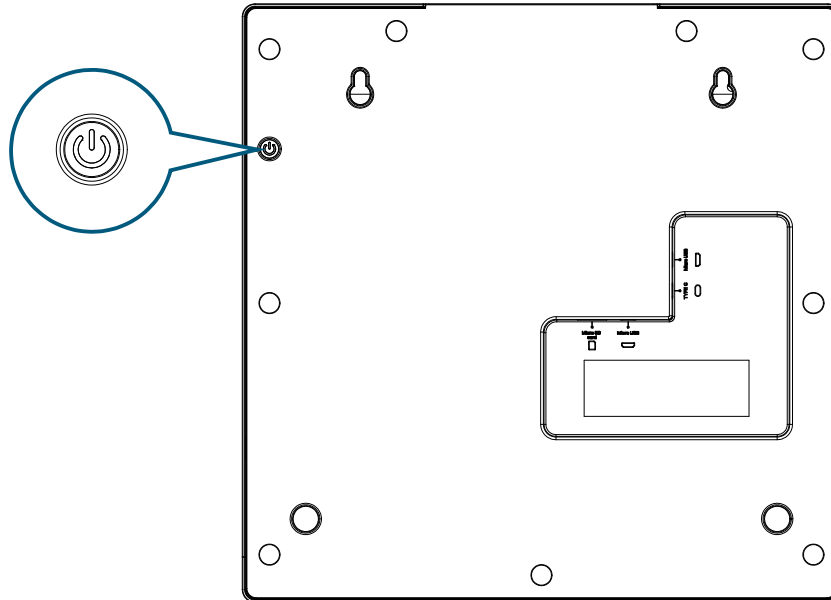


NOTE:

- When the system is turned on, short pressing the power button for one second only turns off the backlight and does not power off the system.
 - When the backlight of system is turned off, short pressing the power button for one second turns the backlight back on.
 - The system supports power-on boot.
-

THE FINDARTS REMOTE CONTROL

 Remote Control Overview

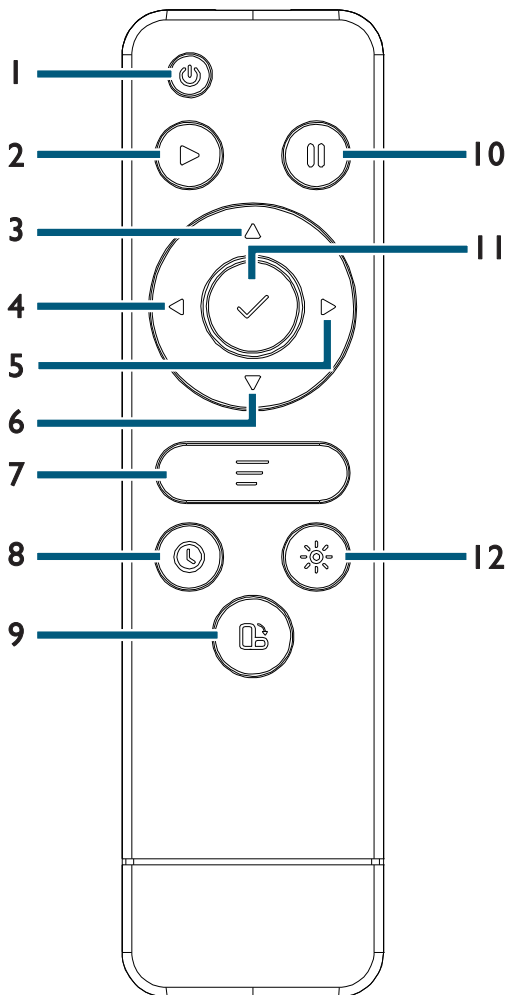

No.	Button
1	Power
2	Play
3	Up
4	Previous
5	Next
6	Down
7	Menu
8	Duration
9	Rotate
10	Pause
11	OK
12	Brightness

Using the Remote Control

SETTING UP THE REMOTE CONTROL



NOTE:

- For some systems the remote control dongle is pre-installed into the right Micro USB port of the system before shipment. In these instances, the steps below are for reference only.
- The remote control needs to be installed with two AAA batteries which are not included in the package.

-
- The remote control's range is 10 meters (in an open space).
-

1. Remove the battery cover from the bottom side of the remote control and remove the remote dongle from the battery compartment.
2. Attach the Type-A USB-to-Micro USB adapter to the remote control dongle.
3. Install the dongle to the Micro USB port at the rear side of the system with the PQI icon facing up.

POWERING ON/OFF THE SYSTEM

Press the Power (1) button to power on or off the system.

 
PAUSING AND PLAYING THE ARTWORK PRESENTATION

To pause or play an artwork presentation:

- Press the Pause (10) button to pause the presentation of the artwork. Once the button is pressed, the system will stay showing the current artwork.



- Press the Play (2) button to resume playback.

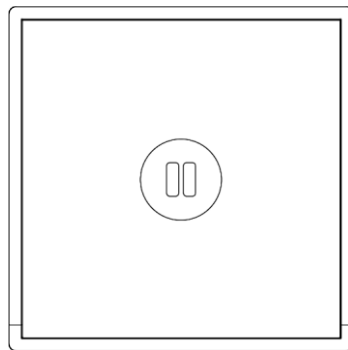

SELECTING A PIECE OF ART

 
To select a specific piece of art within an album:

- Press the Previous (4) button to display the previous piece of art.
- Press the Next (5) button to display the next piece of art.

SELECTING AN ALBUM

To select a specific album among multiple albums:


1. Press the Menu (7) button to display the album menu.
2. Press the Up (3) or Down (6) button to select an album.
3. Press the OK (11) button to start playing the album.

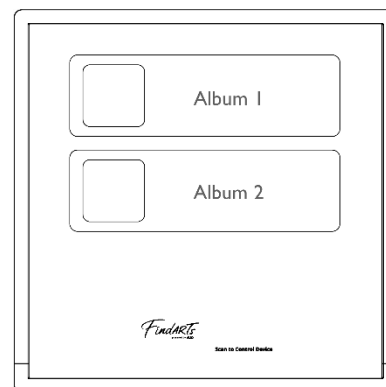

ADJUSTING THE PRESENTATION DURATION

To set the duration each piece of art in an album is shown:

 
1. Press the Duration (8) button and the duration adjustment menu will be displayed.
2. Press the Up (3) or Down (6) button to set the duration.
3. Press the OK (11) button to complete the setup.

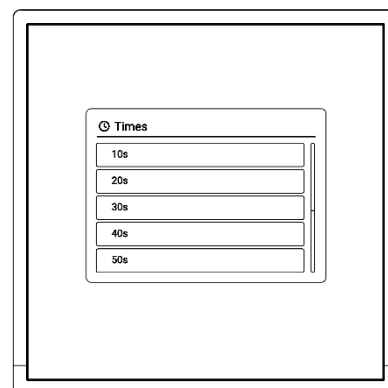


ADJUSTING THE BRIGHTNESS

To adjust the brightness:

 
1. Press the Brightness (12) button and the brightness adjustment bar will be displayed.
2. Press the Up (3) or Down (6) button to adjust the brightness.
3. Press the OK (11) button to complete the setup.

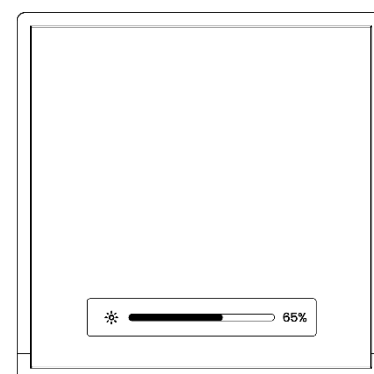


USING THE CONTENT ENCRYPTION KEY

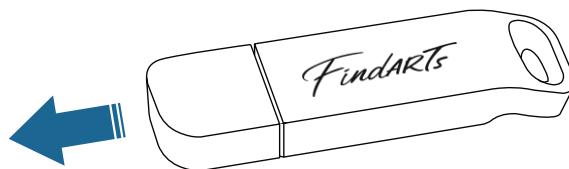 

 
1. Retrieve the content encryption key and remove the protective cover.
2. Attach the Type-A USB-to-Micro USB adapter to the content encryption key.
3. Install the dongle to the Micro USB port at the rear side of the system with the PQI icon facing up.
4. After inserting the content encryption key, the screen will show "Storage inserted," indicating that the key has been to register machine code.

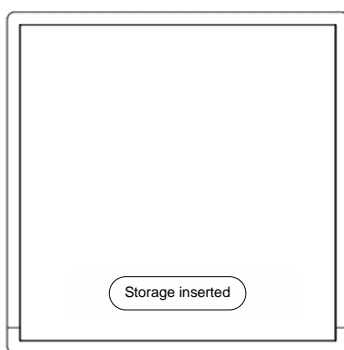

 
5. The presentation will automatically start importing to the device and show import progress without requiring any action.

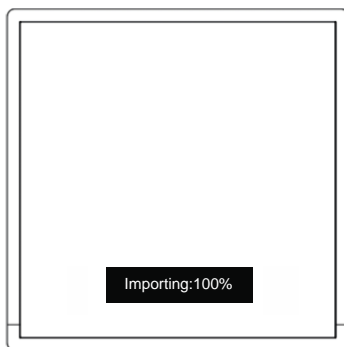

 6. After the import is completed, the screen will show "Finish import." Subsequently, the presentation of the artwork will play automatically. At this point, the album import is finished, and the content encryption key can be removed.

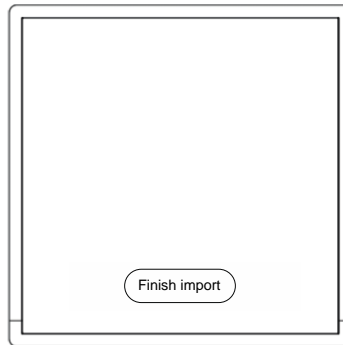

 7. Once the content encryption key is removed, the screen will show "Storage removed." The reminder message will automatically disappear after 5 seconds.

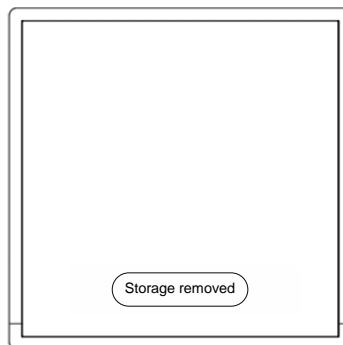

NOTE:

- Each content encryption key can only be paired with a single FindARTs device. If inserted into a non-corresponding FindARTs device, authorization album import will not be allowed.
 - Non-FindARTs devices will be unable to read authorized albums.
 - The content encryption key can be removed once the authorization album import is completed; it does not need to remain inserted.
 - Do not insert unofficially authorized content encryption key into the device, as this may lead to device damage.
-

APPENDIX A: SPECIFICATIONS

Item		Model	FindARTs 17"
System			
LCD Size (inch)			17
Resolution			1920 × 1920
Brightness (cd/m ²)			350
Contrast Ratio			1000:1
Viewing Angle U/D/L/R (degree)			89/89/89/89
Power Consumption (W)			26W(typ.) / 36W(max.)
Color Depths			16.7M (8bit)
Dimension L x W x D (mm)*			330 x 330 x 19.9
Weight (kg)*			Unpacked 2.1
Power			
Output Power			DC 12V / 3A
Power Adapter Length (m)			1.8
System			
CPU			Quad-core ARM [®] Cortex [™] - A53
Operating System			Android 9.0
RAM			2GB DDR
Storage			8GB eMMC
Connectivity			
I/O ports			Type C DC-In x1 Micro USB x2
Network	Wi-Fi		2.4GHz & 5GHz
	Bluetooth		BT4.2
Environment			
Operating Temperature			0°C - 40°C
Storage Temperature			-10°C - 60°C
Operating Humidity			20% - 80% RH
Storage Humidity			20% - 80% RH

*The frame of the system is not included.



NOTE: In order to enhance the realism in images, the system will mask border of the images.

官網最新版 User Manual



最新操作說明可掃描 QR code
→ 點擊「相關下載」→ 下載說明書

Scan the QR code on the cover page.
Go to **FindARTs official website** →
Downloads → select **Download** to
download the latest user manual

FindARTs



Contact US

service@findarts.net

www.findarts.net

presented by **AUO**